


The new interface tour

The Phase Manager interface is designed to provide you with easy navigation and a dashboard of your current project.


note: you can click on the blocks in the images below to learn more about their role.

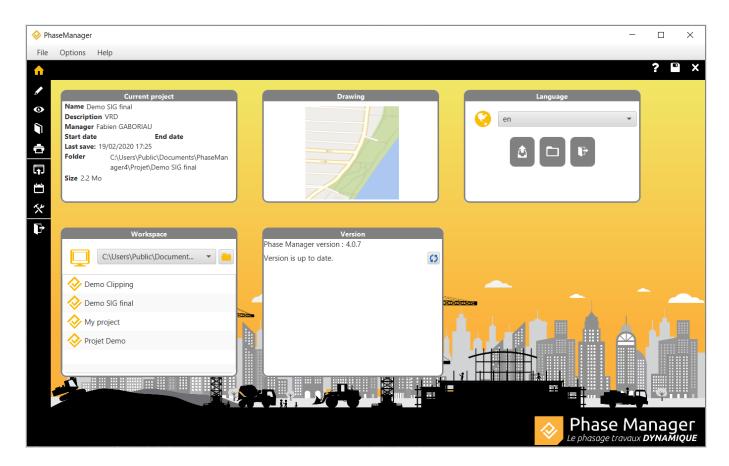

 
en:3-interface:imagemap-2

Sidebar menu

The sidebar menu gives access to the main interfaces of Phase Manager...

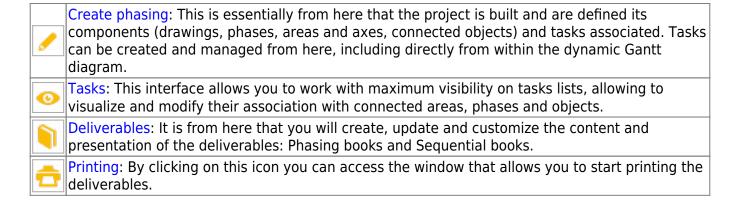






*

Toolbox: Provides access to the project and Gantt properties management window.

en:3-interface:2-menu-lateral

Main screen


The main screen is the dashboard of your project, and it allows you to quickly access all the features of Phase Manager.

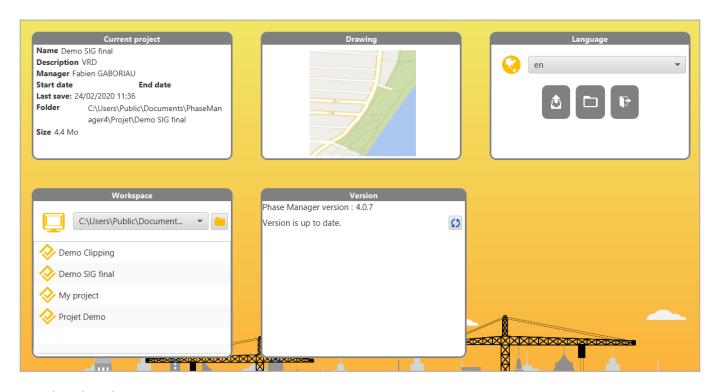

en:3-interface:imagemap-1

Current project



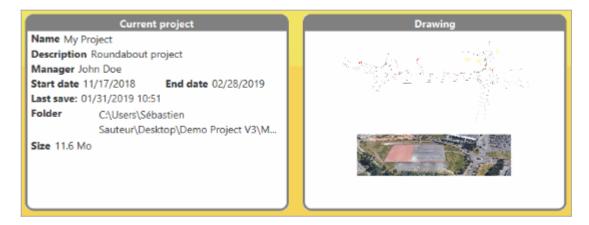


The Current Project and Drawing blocks display information about the current project.

The reduced plan allows you to quickly identify which project you are working on, its name beeing mentioned in the Current project block with useful information to manage your project version:

- · date and time of the last backup
- folder where the project is saved
- project size on disk

Workspace

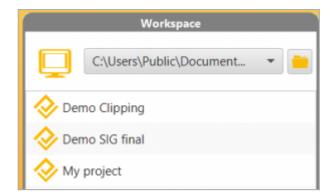

The **Workspace** block lists all projects within the current workspace (folder containing projects).

One will open a project by double-clicking on its name in the list. To change workspace:

- use the drop-down menu at the top of the block (list of the 5 last used workspaces),
- click on the button to specify a new workspace.


Version check

If Phase Manager tells you that your installed version is up to date, you don't have to do anything:






On the other hand, if a new version is available, you are invited to install it by clicking on the download button:

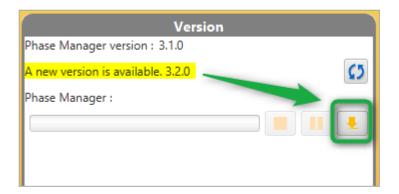

Phase Manager will then start downloading the new version:




Then ask you to save the changes to your open project, before closing:

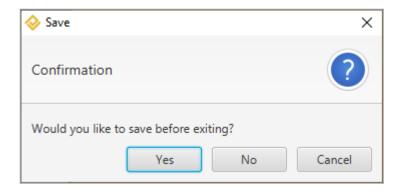

Important: the update is based on a **command window** that **should not be interrupted or closed** (it will close itself at the end of the update):



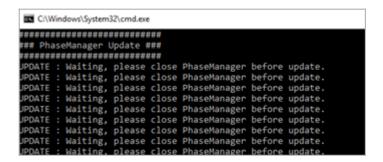

Phase Manager automatically restarts at the end of the update process.

Language block



This block allows to choose the language of the interface, but also to perform a certain number of operations relating to the opening and backup of projects:

