

## Exporting the project's KML


File menu

- Import Export
- **Exporting the project's KML**
- Save project as a template
- Archive a project

Phase Manager allows you to export the axes and areas of a drawing, in the KML georeferenced format.

To do so, go the *File* menu then *Export KML*.

Then choose the drawing from which the areas will be exported:

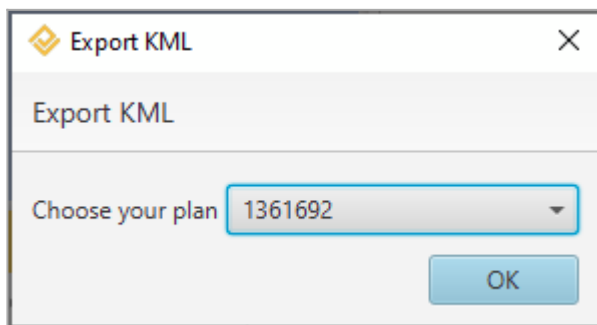

Then choose a target directory where the KML file will be exported, then click on *Save*:

